


LL NEEDLE TIPS (LUER LOCK)

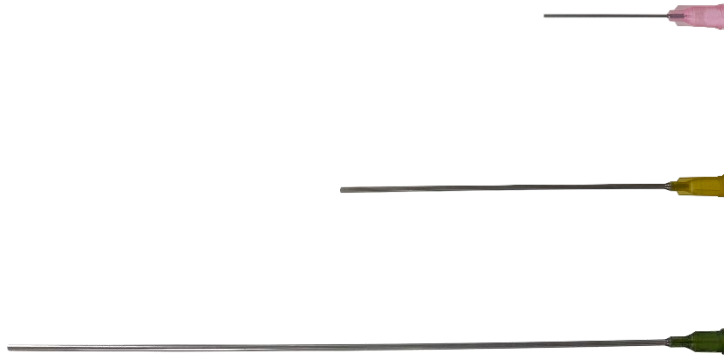

Specifications by reference :

1. Short Model (Pink) – Ref. AC-S038 (6 pieces)

- Total Length : 50 mm
- Useful Length : 38 mm
- Outer Diameter (OD) : 0,90 mm
- Inner Diameter (ID) : 0,60 mm

2. Medium Model (Yellow) – Ref. AC-S100 (6 pieces)

- Total Length : 116 mm
- Useful Length : 100 mm
- Outer Diameter (OD) : 1,50 mm
- Inner Diameter (ID) : 1,10 mm

3. Long Model (Green) – Ref. AC-S200 (6 pieces)

- Total Length : 216 mm
- Useful Length : 200 mm
- Outer Diameter (OD) : 1,80 mm
- Inner Diameter (ID) : 1,54 mm

GENERAL DESCRIPTION

Precision tips composed of a plastic base and a metal cannula. Designed to reach deep, narrow, or hard-to-access application areas thanks to their small diameter and variable lengths.

EQUIPMENT COMPATIBILITY

- **Connection:** Standard Luer Lock system.
- **Compatible Injectors:** Exclusively for use with Plastiform LL Nozzles (Ref. **AC-030** and **AC-031**).

PRODUCT COMPATIBILITY

- Designed for use with **fluid** products from the Plastiform range in 50 mL cartridges.
- Primary recommendation: **Plastiform F20**

INSTRUCTIONS AND REUSABILITY

- **Polymerization Warning:** Once the two product components enter the injector, the curing process begins. The product will harden within a few minutes.
- **Nozzle Status:** The LL Nozzle (AC-030 or AC-031) is not reusable after the product hardens inside.
- **Needle Tip Reusability:** Unlike the Nozzle, the LL needle tips **can be reused**.
 - Allow the product inside the needle to fully polymerize.
 - Once hardened, remove the needle from the nozzle.
 - Pull out the solid plug of polymerized product from inside the needle.
 - The needle is now ready for use again.

PACKAGING

Available in packs of **6 pieces** (valid for all 3 references).

